


CYCPLUS

AS2 Pro

Max

Bicycle Tire Inflator


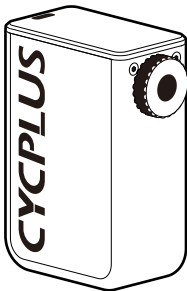


User manual	【01 – 04】
用户手册	【05 – 08】
Benutzerhandbuch	【09 – 12】
Manuel de l'Utilisateur	【13 – 16】
Manual de usuario	【17 – 20】
Manuale d'uso	【21 – 24】
取扱説明書	【25 – 28】

After-sales email: steven@cycplus.com

⚠ Warning


For TPU inner tubes with resin valves, be sure to connect them with an extension air hose, or the valves may melt due to overheating.

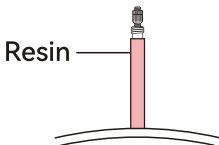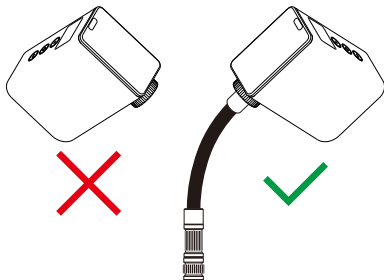

Packing List




Details

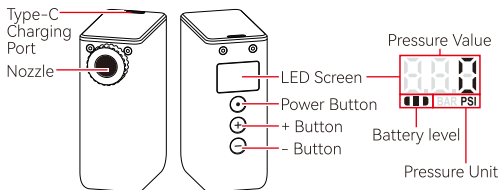


Air Nozzle Adaptation

Use Directly

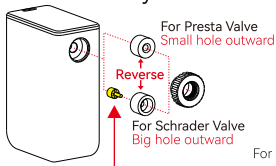

For **Presta Valve**, remove the pillar.
For **Schrader Valve**, install the pillar.

Use with the Hose

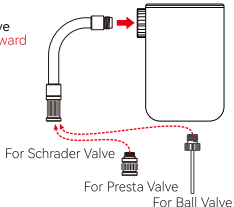

The inflator is ready for Presta valve right out of the box. For Schrader valve, please adjust the nozzle accordingly. The hose can be directly connected and used, regardless of the presence of pillar in the nozzle. **When the target air pressure is above 100 PSI, please use with the hose to prevent air leakage from the nozzle.**



Operation

1 Connect the air valve

A. Connect the nozzle directly to the valve
Adjust the nozzle mode and connect it to the valve. Keep a tight grip on the nozzle while inflating.

B. Use the hose


Hold the hose and the suitable adapter, then connect it to the valve. It's recommended to use the hose when using Schrader valve.

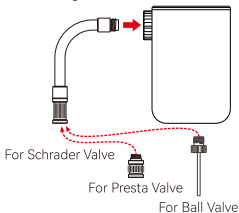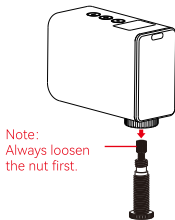

2 Power on and set target air pressure

Long-press the **Power button** to power on, and the screen illuminates, showing the real-time air pressure reading.

Press '+' and '-' together to switch between PSI and BAR. Adjust target pressure using '+' and '-' buttons. The set pressure will display for 3 seconds before reverting to current pressure.

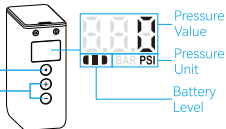


3 Inflating

Press the **Power Button** to start inflation. It will auto shut off when the target air pressure is reached.

4 Shut down

Long-press the **Power Button** to power off. If the air pump is not started and there is no operation within 1 minute while it is powered on, the air pump will automatically shut down.



Protection Mechanism


1. The inflator will automatically shut off after continuous inflation for 1 minute and when the air pressure remains below 5 PSI, to prevent continuous ineffective operation.
2. After 3 minutes of continuous inflation, the inflator will automatically shut down to prevent prolonged operation due to abnormal conditions. If the inflation target hasn't been reached due to the object being too large, please restart the inflator for inflation.
3. When the internal temperature of the inflator exceeds the limit, it will immediately stop working and display the "HOT" on the screen. Please wait for the inflator to cool down before using it again.

Notes

1. Fully charge the inflator before use.
2. The inflator may get hot during operation, and please use it with the silicone case.
3. Press the inflator against the valve before and during inflation, and adjust the position to prevent air leakage.
4. It is normal to feel a sense of traction when pulling the inflator off a presta valve after inflation.
5. While inflating using a ball needle, the displayed air pressure may be higher than the actual air pressure. Please refer to the air pressure value displayed after inflation is completed.

Charge

Charge it with a suitable charger. While charging, the screen battery indicator light illuminates and flashes incrementally. Once the battery is fully charged, all the battery indicator lights will be illuminated.

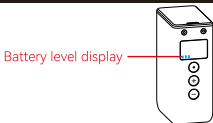

Specifications

Size: 81*60*32 mm

Battery: 600mAh 11.1V 6.66Wh

Current: 2.5~5.5 A

Weight: 205g

Charging Port: Type-C 5V 1.5A

Max Pressure: 120 PSI

Factory Info

Manufacturer: Chengdu Chendian Intelligent Technology Co., Ltd

Warranty: Free repair or replacement within one year after purchase.

After-sales email: steven@cycplus.com



UK
CA



FR

Cet appareil,
ses accessoires,
cordons et batteries
se recyclent

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

MADE IN CHINA